
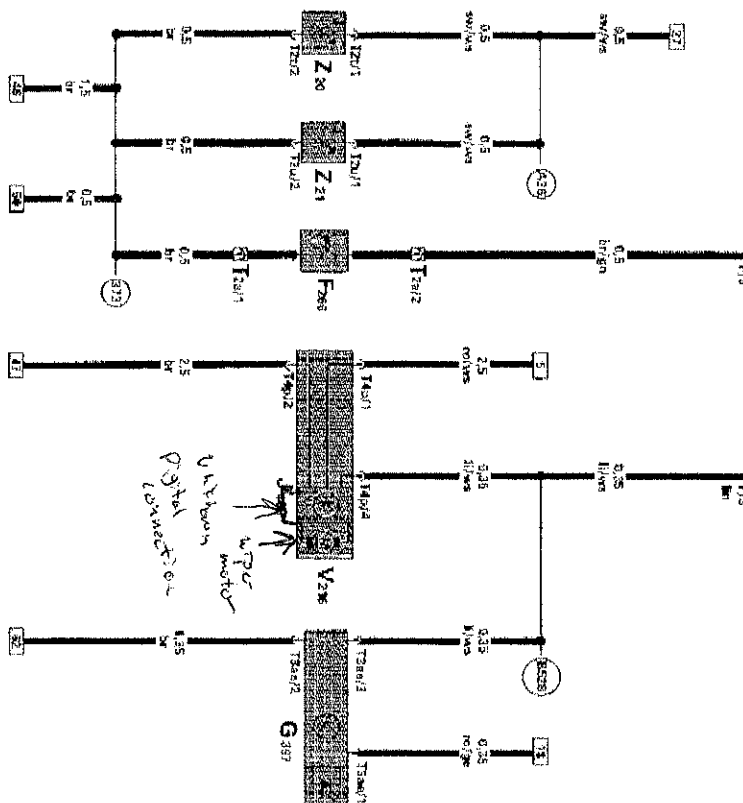


# Jetta

## Wiring diagram

### No. 35/12

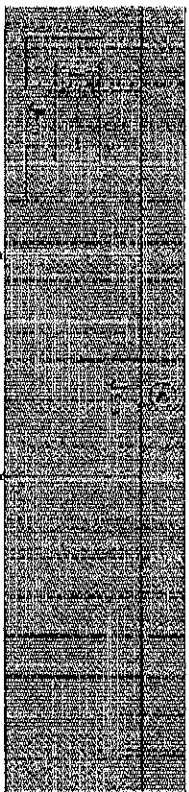

141	142	143	144	145	146	147	148	149	150	151	152	153	154
													31-4282

- WS = white
- SW = black
- RD = red
- BR = brown
- GN = green
- BL = blue
- GR = grey
- V = violet
- YL = yellow
- OR = orange

Front Hood Switch, Rain/Light Recognition Sensor, Vehicle Electrical System Control Module, Dual Washer Pump Relay 2, Left Washer Nozzle Heater, Right Washer Nozzle Heater

- F26 - Front Hood Switch
- G397 - Rain/Light Recognition Sensor
- J400 - Wiper Motor Control Module
- J519 - Vehicle Electrical System Control Module
- J730 - Dual Washer Pump Relay 2
- T2a - 2-Pin Connector, at F286
- T2b - 2-Pin Connector, at Z21
- T2c - 2-Pin Connector, at Z20
- T3a - 3-Pin Connector, at G397
- T4c - 4-Pin Connector, at J 400
- V216 - Left Windshield Wiper Motor
- Z20 - Left Washer Nozzle Heater
- Z21 - Right Washer Nozzle Heater


- 303 - Ground Connection (in main wiring harness)
- 406 - Connection (75a), in instrument panel wiring harness
- 858 - Connection (LIN-Bus) in main wiring harness

# Jetta

## Wiring diagram

No. 35/9

Windshield Wiper Switch, Windshield Wiper/Washer Switch, Vehicle Electrical System Control Module, Steering Column Electronic Systems Control Module

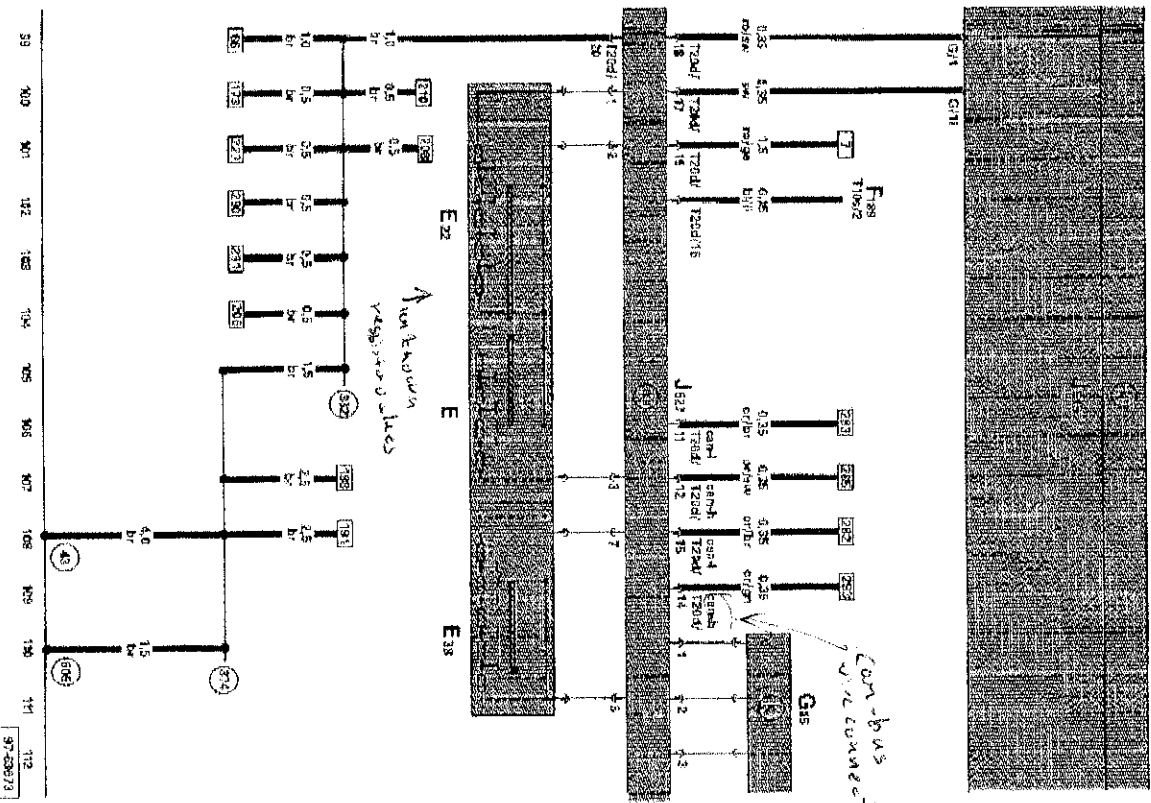

- E - Windshield Wiper Switch
- E22 - Windshield Wiper/Washer Switch
- E33 - Windshield Wiper Intermittent Regulator
- F189 - Tronic Switch
- G85 - Steering Angle Sensor
- J519 - Vehicle Electrical System Control Module
- J527 - Steering Column Electronic Systems Control Module
- T10s - 16-Pin Connector, at F189
- T20d - 20-Pin Connector, at J527
- 43 - Ground Connection, on right A-pillar, lower part
- 314 - Ground Connection 5 (in main wiring harness)
- 382 - Ground Connection 17 (in main wiring harness)
- 605 - Ground Connection (on upper steering column)

ws = white  
 sw = black  
 fo = red  
 br = brown  
 gr = green  
 bl = blue  
 gr = grey  
 vl = violet  
 ye = yellow  
 or = orange

39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

Edition 04.05