


**ALTERNATIVE SENSOR LOCATIONS:**

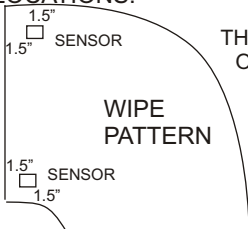

SENSOR MUST BE COMPLETELY WITHIN THE WIPER PATTERN, WITH ABOUT A 1.5" MARGIN, OR SYSTEM WILL APPEAR WAY TOO SENSITIVE

**IMPORTANT: SENSOR PLACEMENT**

This vehicle has a center-out wipe pattern. The sensor must be mounted within the area swept by the wipers. The best sensor location for this vehicle is on the passenger side, in from the pillar.

**RAIN TRACKER INTERFACE WIRING DIAGRAM**

WIPER SYSTEM CLASS:

**CHRY-CV1**

**APPLICATIONS INCLUDE**

- Chrysler Town & Country '01 - '06
- Dodge Caravan '01 - '06
- Plymouth Voyager '01 - '06